


# Modifying Thermostat Settings

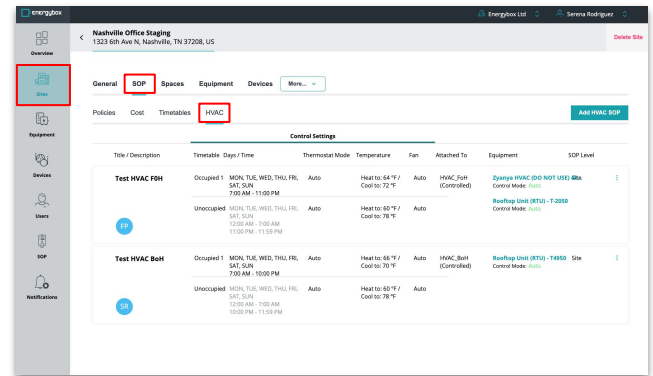


1

Click the **"SOP"** tab in a site, then click on **"HVAC"**.



2

Click the **3 vertical dots** in the top right corner of the selected SOP. Two options will be presented: **"Edit"** and **"Delete"**. Click **"Edit"**. A popup will appear with 2 tabs. Step One consists of basic SOP settings. Step Two is the advanced settings suite.

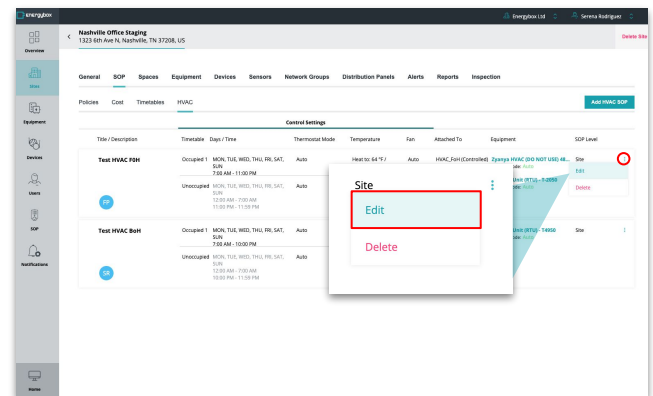

3

Once completed, click the **"Add"** button in the bottom right corner to add the new SOP. This will also update the settings to the EdgeController at the site.

